

FIG. 1

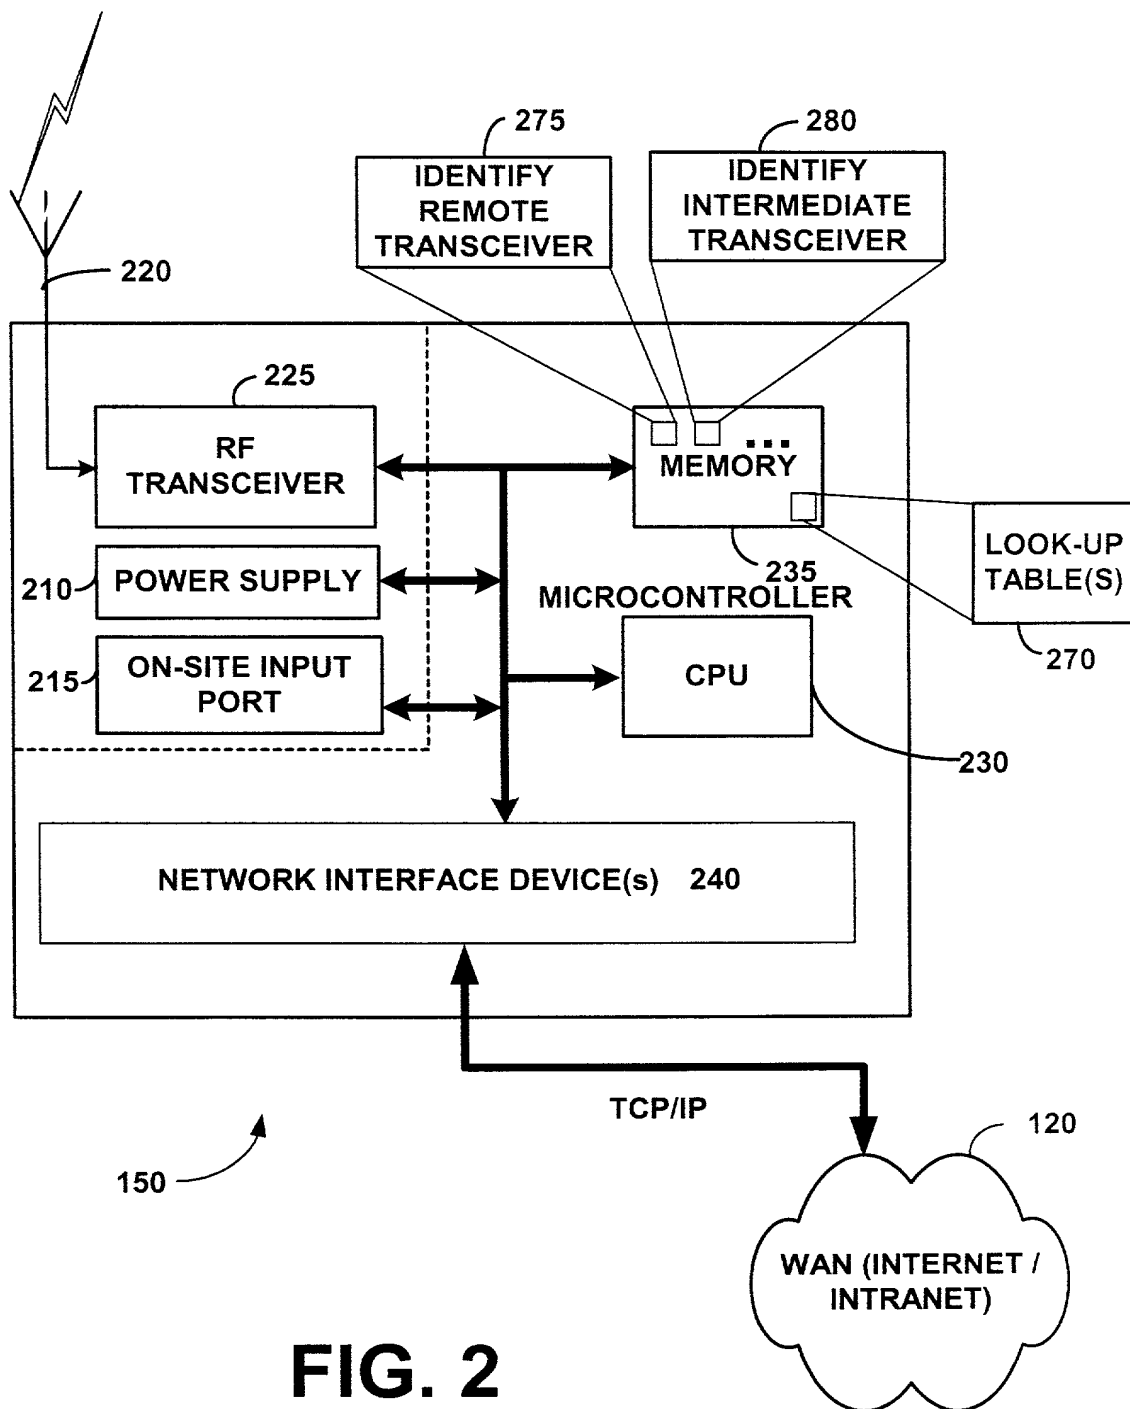


FIG. 2


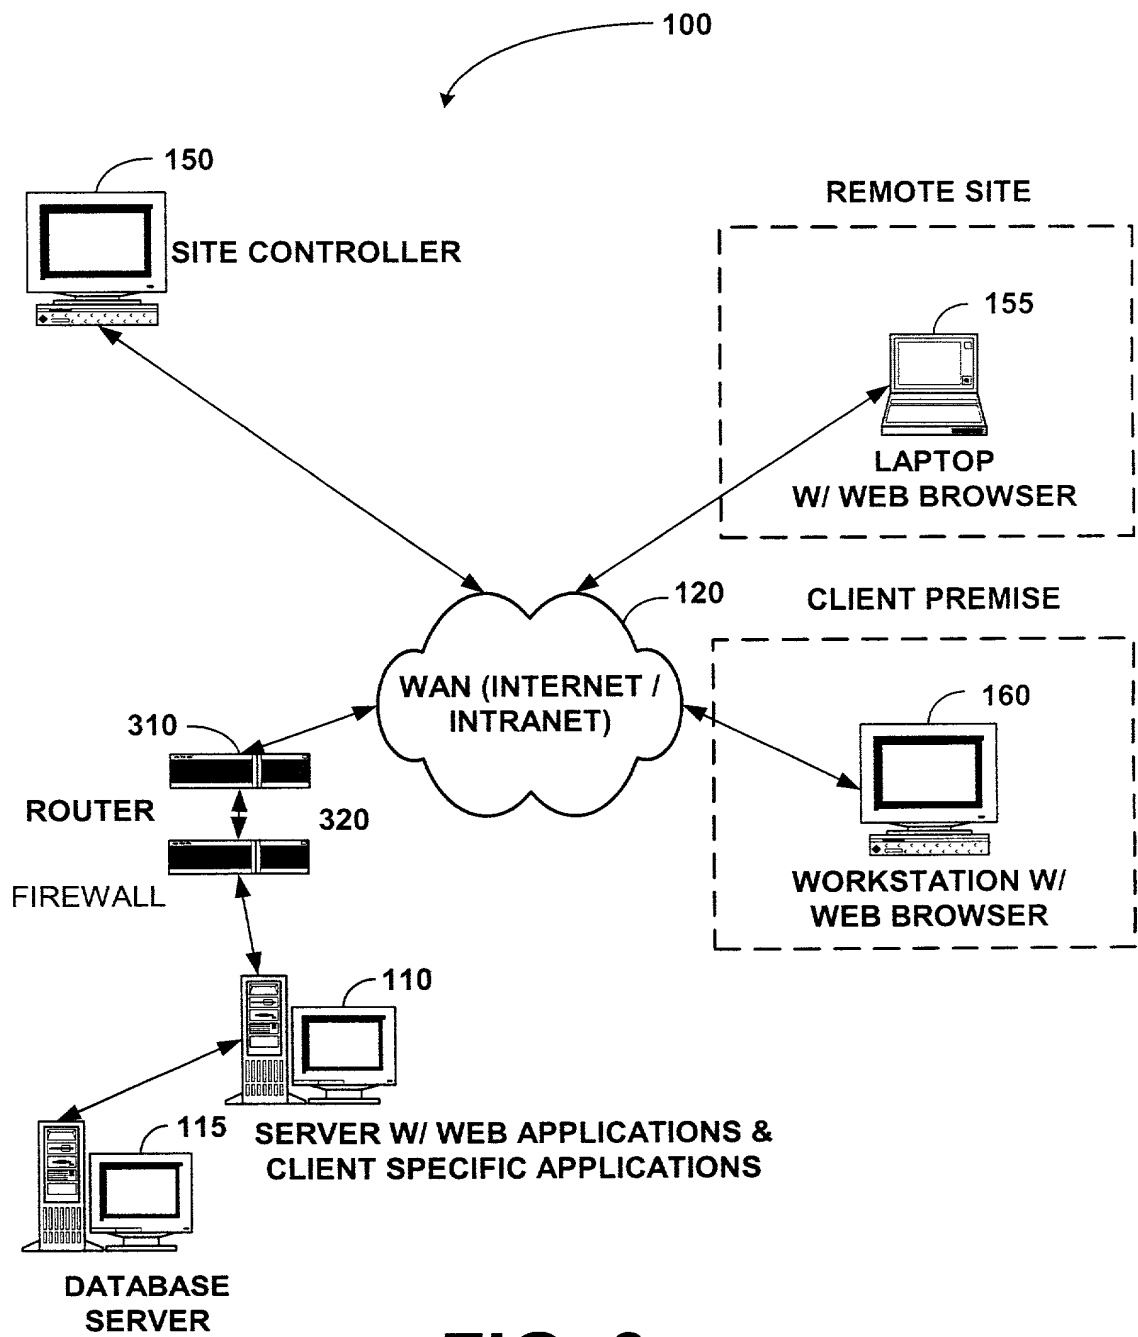


FIG. 3

FIG. 4 Message Structure

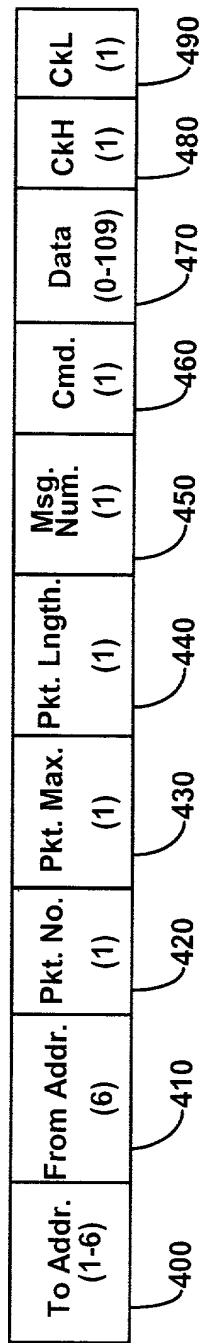

Sample Messages

Central Server to Personal Transceiver - Broadcast Message - FF (Emergency)

Byte Count = 12

To Addr. (FF)	From Addr. (12345678)	Pkt. No. (00)	Pkt. Max. (00)	Pkt. Lngth. (0C)	Cmd. (FF)	CkH (02)	CkL (9E)
------------------	--------------------------	------------------	-------------------	---------------------	--------------	-------------	-------------

600

First Transceiver to Repeater (Transceiver)
Broadcast Message - FF (Emergency)

Byte Count = 17

To Addr. (F0)	From Addr. (12345678)	Pkt. No. (00)	Pkt. Max. (00)	Pkt. Lngth. (11)	Cmd. (FF)		CkH (03)	CkL (A0)
------------------	--------------------------	------------------	-------------------	---------------------	--------------	--	-------------	-------------

602

Data
(A000123456)

Note: Additional Transceiver Re-Broadcasts do not change the message.
The messages are simply received and re-broadcast.

Message to Device "A0" From Device "E1" Command - "08" (Respond to PING)
Response will reverse "To" and "From" Addresses

Byte Count = 17

To Addr. (A012345678)	From Addr. (E112345678)	P # (00)	P Max. (00)	P Lngth. (11)	Cmd. (08)	Data (A5)	CkH (04)	CkL (67)
--------------------------	----------------------------	-------------	----------------	------------------	--------------	--------------	-------------	-------------

604

FIG. 6

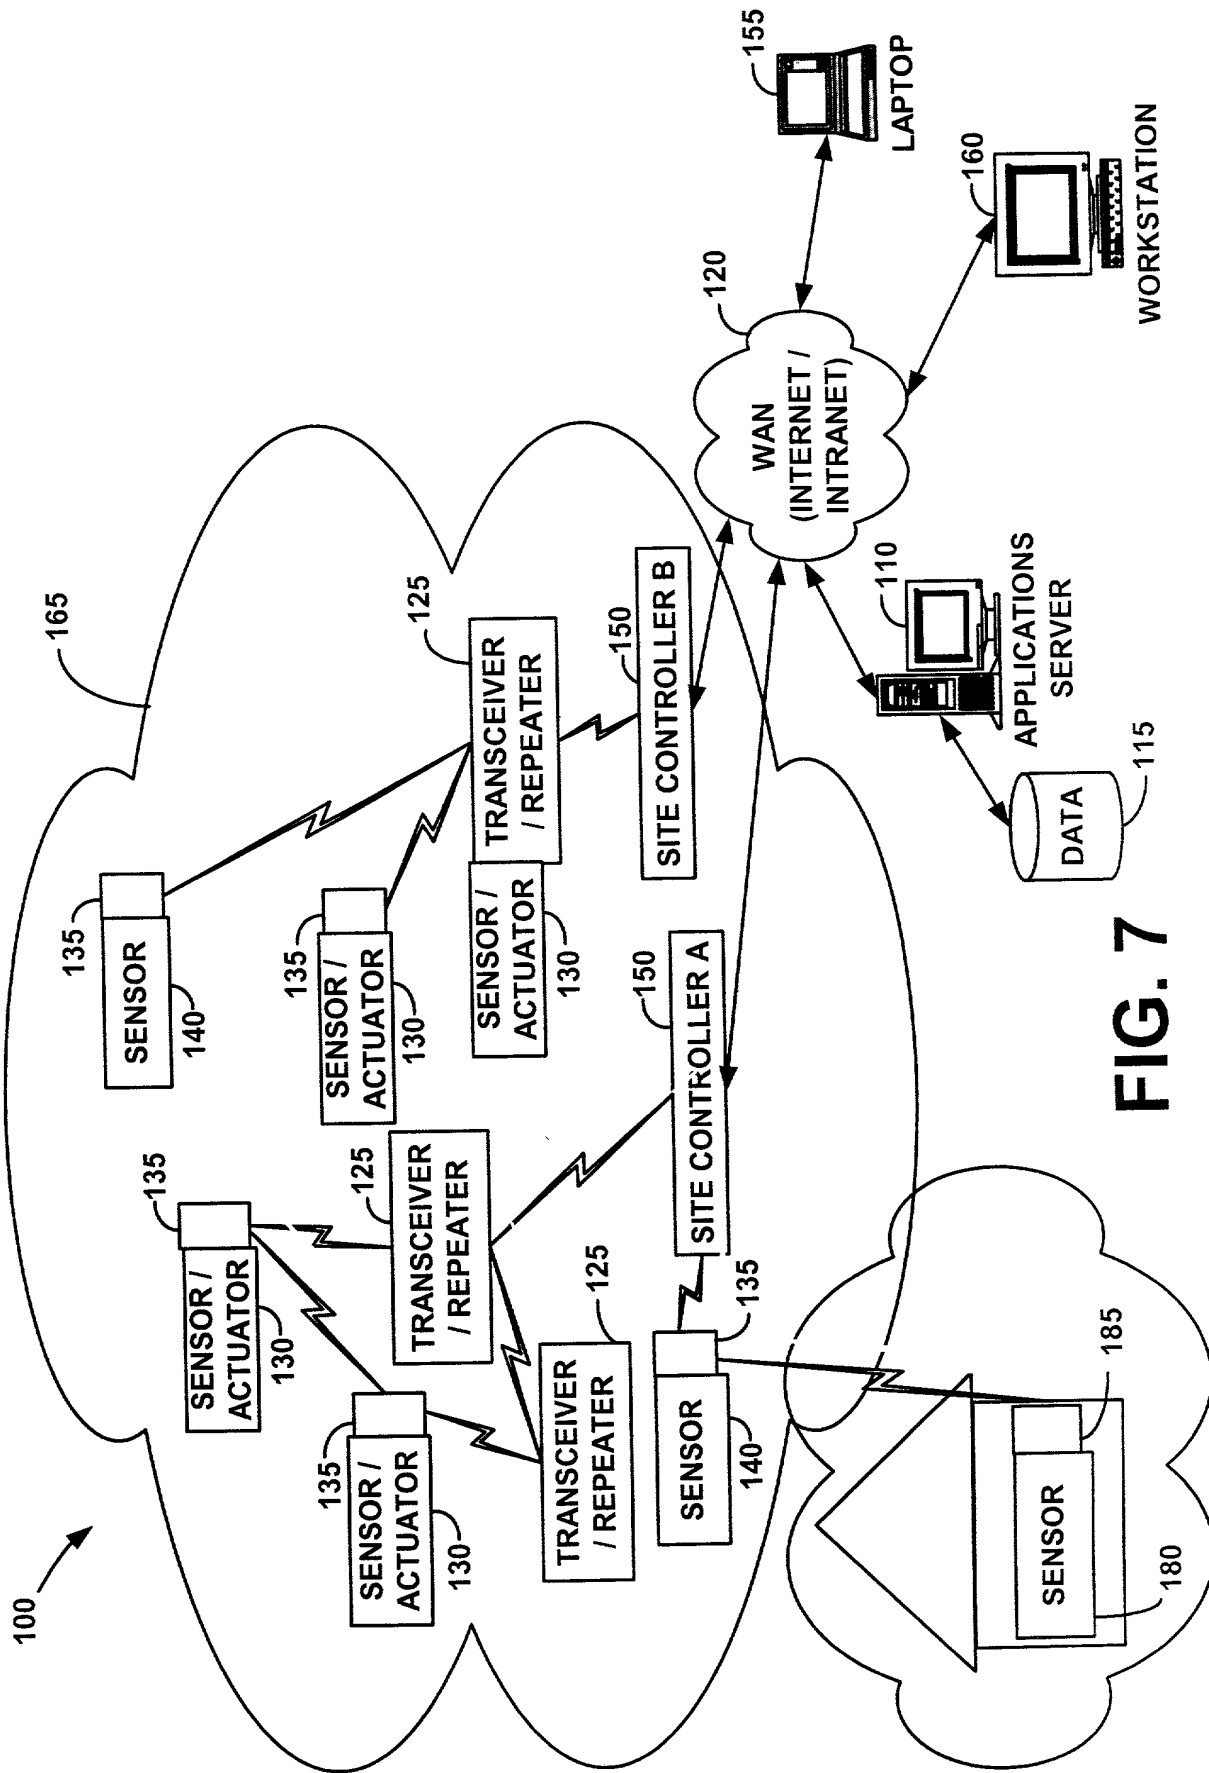


FIG. 7